


INSTALL LINK WITH  
TAPPED HOLES ON  
THIS SIDE.

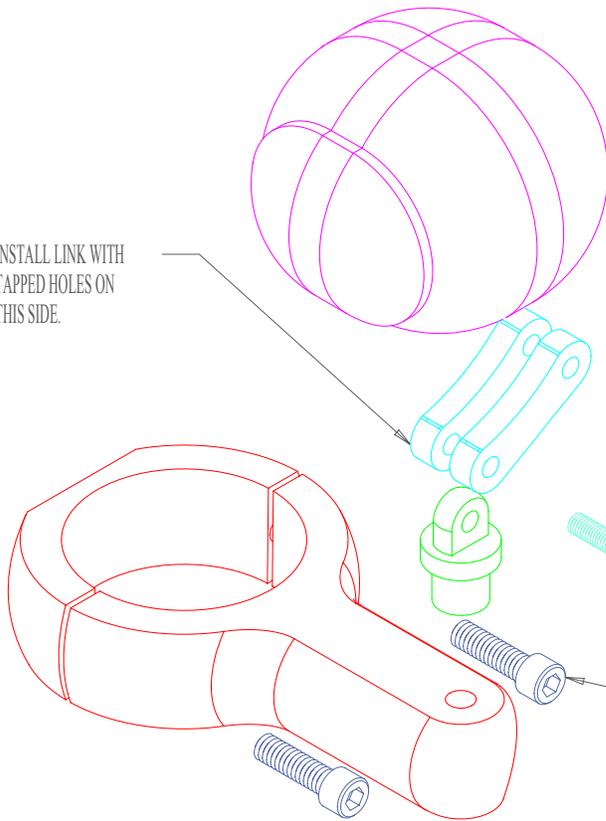

INSTALLATION INSTRUCTIONS: INSTALL CLAMP BRACKET JUST BENEATH FENDER WITH LOGO ON TOP AND WITH "TICK" MARKS ALIGNED. THE BORE IS TAPERED WITH THE LARGE DIAMETER AND LOGO ON TOP. REMOVED STANDARD MOUNTING BRACKET SUPPLIED WITH CYBER WHITE LIGHTS AND DISCARD. INSERT STEM IN MAIN BRACKET AND POSITION LINKS WITH RADIUS SIDE NEXT TO LIGHT. USING ONE LINK WITH CLEARANCE HOLES AND ONE WITH TAPPED HOLES, INSERT 5 MM SCREWS AND TIGHTEN. AIM LIGHTS AND TIGHTEN ALL SCREWS. CONNECT WIRES TO SWITCH AND ELECTRICAL SOURCE. LEFT SIDE ONLY SHOWN FOR SIMPLICITY.

5 MM x .8 MM x 15 MM SHCS  
STAINLESS STEEL, SUPPLIED

6 MM x 1.0 MM x 20 MM SHCS  
STAINLESS STEEL, SUPPLIED

6 MM x 1.0 x 20 MM SHCS  
STAINLESS STEEL, SUPPLIED

		237 Lewis Harley Road El Dorado, Arkansas 71730 PHONE: (870) 863-5653 FAX: (870) 863-5344	
		MODEL AND DESCRIPTION: <b>GS1200-C</b>	
THIRD ANGLE PROJECTION 	DRAWN: BCG DATE: 2/27/06	COMPUTER FILE # R1200GS, CYBER WHITE BRACKETS	SCALE: NONE REV: